

Getting Started With Your Electric Golf Cart

1. Fully charge your battery before using it, it should take approximately 6 hours.
2. Charge the remote control through the USB cable.
3. Download the Axglo APP and set up your preferred preference.
4. Press& hold POWER SWITCH for 2s to turn on the E-Cart.



Functions and Operation of Remote Control



How To Use Assisted Driving Mode

- Activate:** Quickly **PRESS POWER SWITCH TWICE** to activate assisted driving mode.
- Increase Speed:** **ROTATE POWER SWITCH CLOCKWISE**, max speed 9km/h.
- Decrease Speed:** **ROTATE POWER SWITCH COUNTER - CLOCKWISE**, min speed 0km/h (STOP).
- Lock / Stop:** **PRESS POWER SWITCH ONCE** to stop / lock the cart (exits assisted driving mode).

How To Use Remote Control

- Follow - Me :** **PRESS THE 'Dog' KEY** to enable auto-follow mode, press again to exit the mode.
- Remote Control:** **MOVE THE CENTRAL KEY** towards the direction you want the cart to move.
- Auto Cruise:** Quickly **PUSH CENTRAL KEY UPWARD TWICE** to enable auto-cruise. Gently push the key downward or press the lock key to disable the auto-cruise feature.

Function Indicator Light

- Red:** Locked **Yellow:** Remote Control **Green :** Following
Blue: Unlocked / Standby / Manual Push

Safe Use Of Your Cart

1. **Maximum load capacity: 20kg**
2. Submerging the cart in **WATER WILL CAUSE DAMAGE** to the cart. We recommend using the manual push mode while crossing a bridge or in a limited space, like a parking lot.
3. Before transportation, the **BATTERY MUST BE DISCONNECTED** from the cart, and we recommend charging your battery after every use.
4. When **PARKING ON A SLOPE**, please **DO NOT TURN OFF THE POWER** and remember to press the stop key ('Cloud' key). Turning off the power would disable the electric braking system of the cart.
5. The **BATTERY SHOULD NEVER BE FULLY DISCHARGED**. It will cause irrecoverable long-term damage. Fully discharging your battery will not increase its capacity or lifespan.

Maintenance

1. Please do not store your cart in the open air.
2. When it rains heavily, protect the cart from the rain and try to cover it with an umbrella.
3. Please use a soft dry towel to wipe off the excess mud, dirt or water from the cart.
4. Keep the main folding track clean and well lubricated.